Berkel

The Choice of Experience

CATALOG OF REPLACEMENT PARTS

MODELS
909A 919A
909E 919E
909M 919M
SLICERS

EFFECTIVE MARCH 2009

Table of Contents

5 ELECTRICAL COMPONENTS (909A & 919A)
7 ELECTRICAL COMPONENTS (909E, 909M, 919E, & 919M)
9 TOP COVER
11 BASE UNIT
13 GAUGE PLATE
15 KNIFE DRIVE MOTOR UNIT
17 KNIFE BOX
19 PRODUCT TABLE
20 POWER STROKE
23 LIFT ASSEMBLY (909 SERIES)
25 LIFT ASSEMBLY (919 SERIES)
27 SHARPENER ASSEMBLY

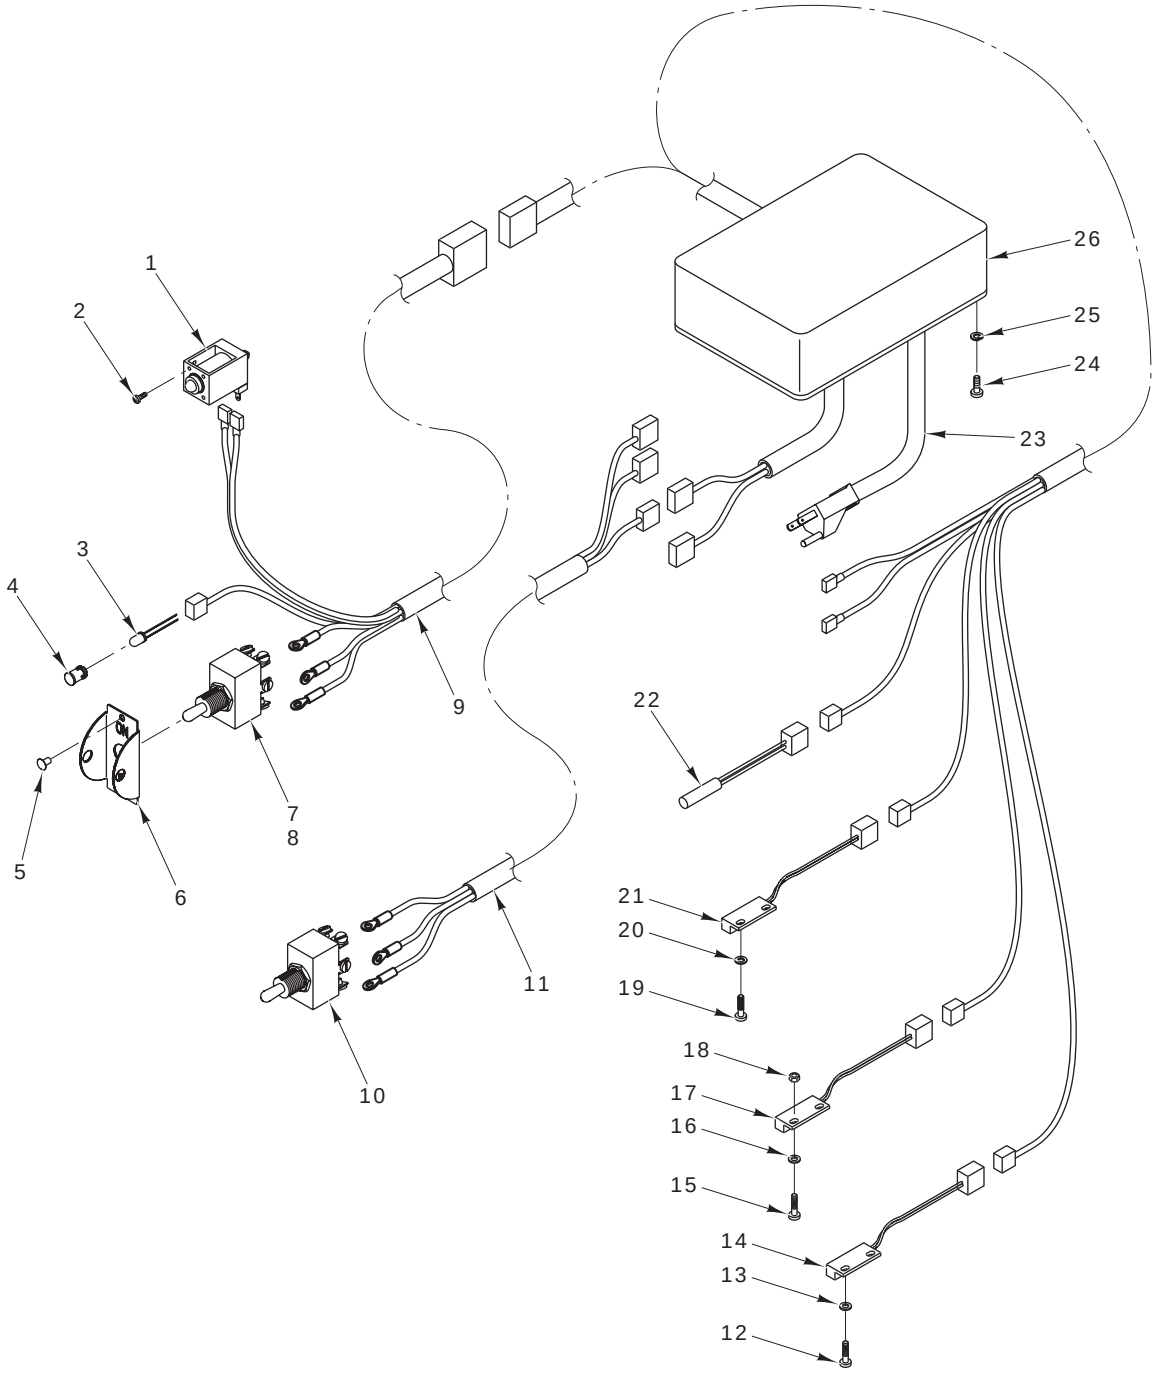

ELECTRICAL COMPONENTS (909A & 919A)

ELECTRICAL COMPONENTS (909A & 919A)

ILLUS. PL-58950	PART NO.	NAME OF PART	AMT.
1	01-402675-00896	Solenoid – Gauge Plate Lock	1
2	01-402175-00436	Screw 3 x 3/8 Flat Hd.	AR
3	01-402675-00869	Light – Pilot (LED)	1
4	01-402675-00900	Lens – Red	1
5	01-402275-00425	Rivet	2
6	01-402675-00647	Guard – Toggle Switch	1
7	01-402675-00910	Switch – On/Off	1
8	01-402675-00905	Switch – On/Off (Use On Machines With Scales)	1
9	01-404175-00703	Cord – Control	1
10	01-402675-00680	Switch - Speed Control	1
11	01-404175-00704	Cord - Speed	1
12	01-402175-01310	Mach. Screw 4-40 x 1/4 Pan Hd.	2
13	01-402275-01010	Washer	2
14	01-404175-00688	Switch – Mag Proximity Center Plate	1
15	01-402175-01310	Mach. Screw 4-40 x 1/4 Pan Hd.	2
16	01-402275-01010	Washer	2
17	01-404175-00688	Switch – Mag Proximity No Travel	1
18	01-402175-07010	Nut 4-40 Hex (SST)	2
19	01-402175-01310	Mach. Screw 4-40 x 1/4 Pan Hd.	2
20	01-402275-01010	Washer	2
21	01-404175-00688	Switch – Mag Proximity Lift	1
22	01-404175-00701	Sensor – Meat Table	1
23	01-404175-00031	Cord – Plug to Switch	1
24	01-402175-03341	Mach. Screw 10-24 x 3/8 Pan Hd.	1
25	01-402275-03045	Lockwasher #10 Spring	1
26	01-404675-01091	Control Box Assy.	1

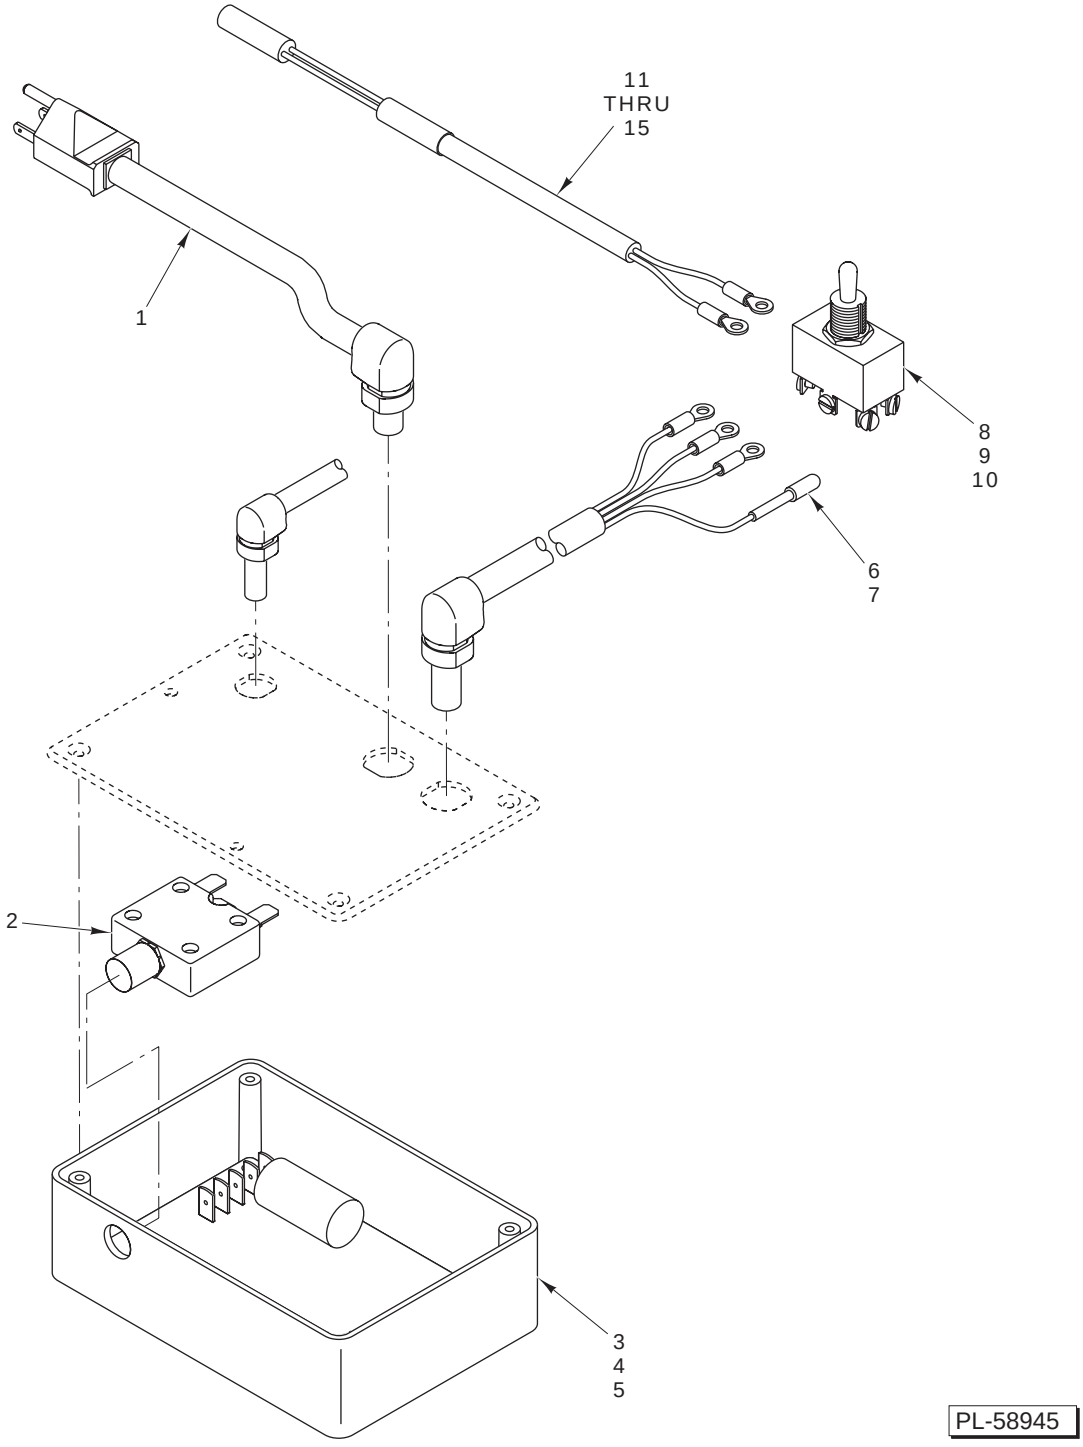

ELECTRICAL COMPONENTS (909E, 909M, 919E, & 919M)

ELECTRICAL COMPONENTS (909E, 909M, 919E, & 919M)

ILLUS. PL-58945	PART NO.	NAME OF PART	AMT.
1	01-404175-00031	Cord – Plug To Switch	1
2	01-402675-00752	Breaker – Circuit (120 V., 12 Amp.)	1
3	01-404675-01090	Box – Control Assy.	1
4	01-402175-01381	Screw 8-32 x 1 3/4 Pan Hd (Control Box Mounting)	2
5	01-402275-03030	Washer (Control Box Mounting)	2
6	01-402675-00869	Light – Pilot (LED)	1
7	01-402675-00900	Lens – Red	1
8	01-402675-00910	Switch – On/Off	1
9	01-402675-00647	Guard – Toggle Switch	1
10	01-402275-00425	Rivet	AR
11	01-404175-00709	Sensor – Proximity Center Plate (909M & 919M)	1
12	01-403375-01364	Bracket – Sensor Center Plate (909M & 919M)	1
13	01-402175-00487	Screw 4-40 x 1/2 Phil. Pan Hd. (909M & 919M)	AR
14	01-402175-07132	Set Screw 8-32 x 1/4 Cup Pt. (909M & 919M)	2
15	01-404675-01112	Sensor Assy. (Incls. Items 11 thru 14) (909M & 919M)	1

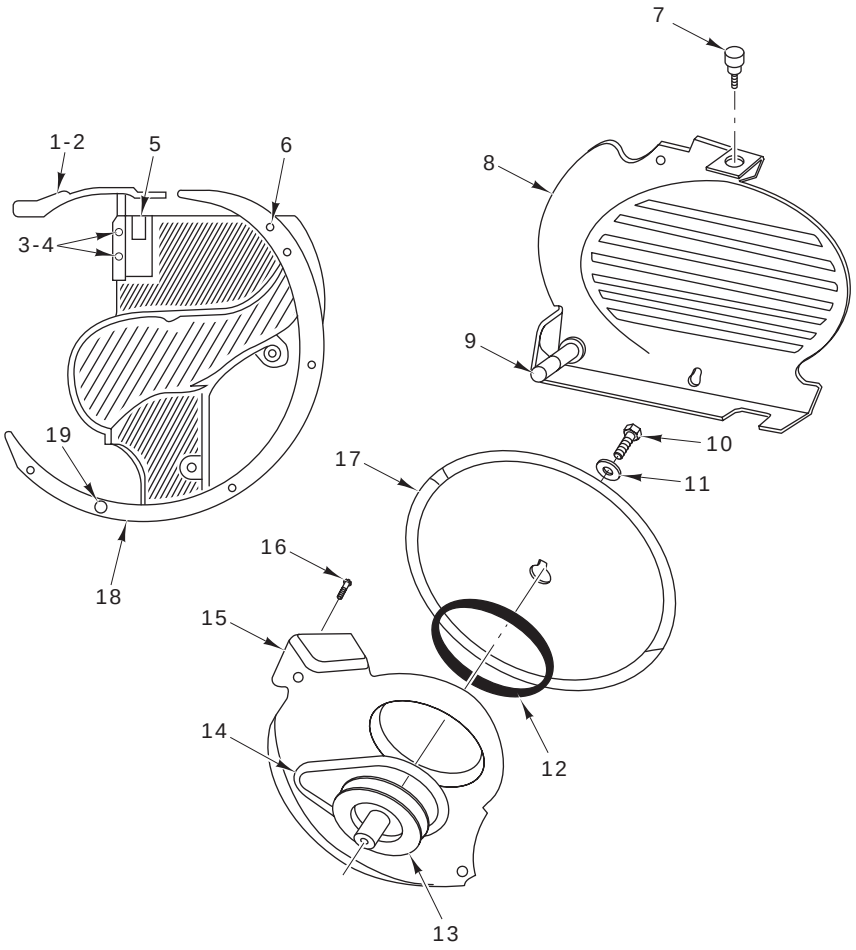

PL-58955

TOP COVER

TOP COVER

ILLUS. PL-58955	PART NO.	NAME OF PART	AMT.
1	01-403775-00442	Guard – Upper Knife	1
2	01-402175-03320	Mach. Screw 6-32 x 1/4 Pan Hd.	1
3	01-402175-00374	Screw – Tamper Proof	1
4	01-404975-09241	Bit – Tamper Proof 5/32 Hex	1
5	01-402275-00573	Bushing – Knife Box	1
6	01-403375-01077	Pin – Center Plate	1
7	01-402375-00139	Plunger	1
8	01-404675-00823	Plate Assy. – Center	1
9	01-404175-00436	Magnet Assy.	1
10	01-403375-01072	Screw – Knife 7/16-20 x 5/8 Hex (SST)	1
11	01-403475-00781	Washer – Knife	1
12	01-403875-00025	Ring – Knife Box Cover	1
13	01-404375-00192	Pulley Assy. – Knife	1
14	01-402375-00141	Belt – Poly V	1
15	01-403475-00765	Cover –Knife Box	1
16	01-402175-03452	Mach. Screw 1/4-20 x 5/8 Truss Hd.	1
17	01-403675-00070	Knife – Gravity Feed Slicer	1
18	01-404575-00831	Guard Assy. – Knife	1
19	01-403375-01073	Post – Center Plate	1

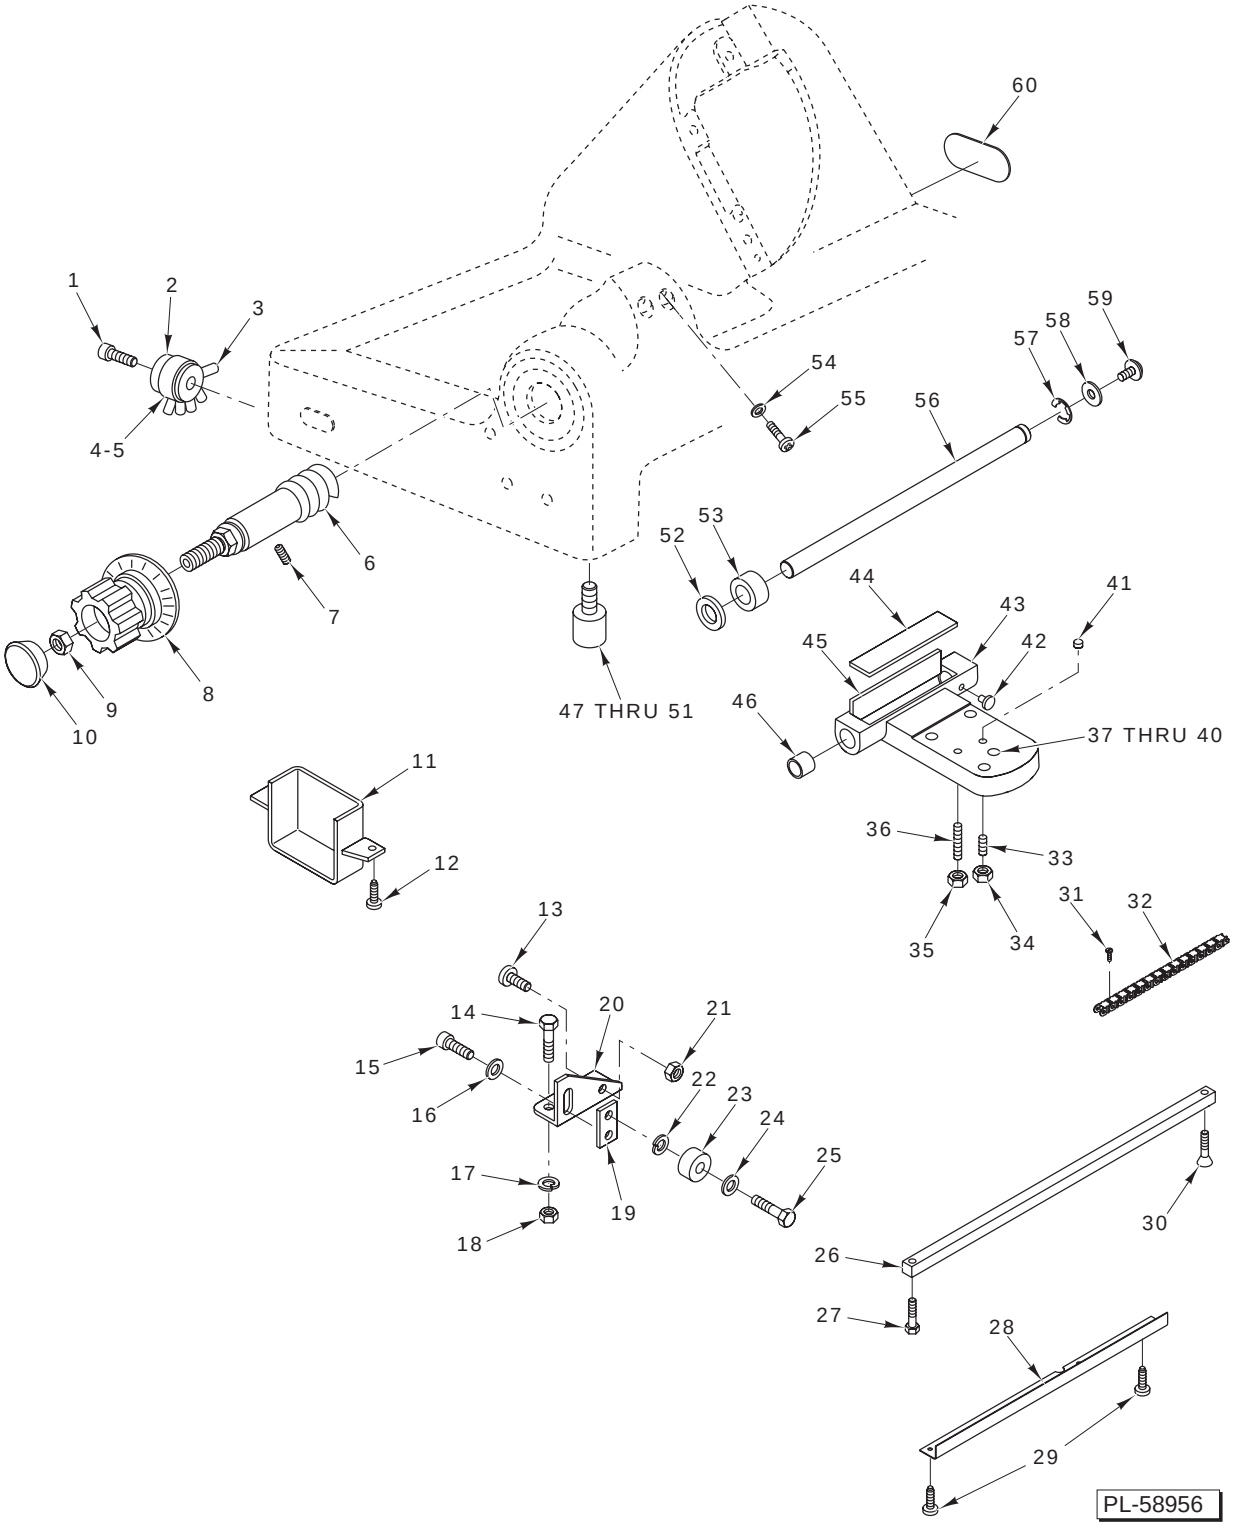
60
1
2
3
4-5
54
55
56
57
58
59
6
7
8
9
10
52
53
47 THRU 51
44
43
41
45
42
46
37 THRU 40
11
12
36
33
35
34
31
32
13
14
20
21
15
16
22
23
24
25
17
18
19
30
26
27
28
29
PL-58956

BASE UNIT

BASE UNIT

ILLUS. PL-58956	PART NO.	NAME OF PART	AMT.
1	01-402175-01775	Cap Screw 3/8-16 x 1 1/4 Hex Socket Hd.	1
2	01-403375-01070	Bushing – Index	1
3	01-403375-01102	Pin – Index Gear Segment	1
4	01-404375-00196	Segment Assy. – Index (Incls. Item 3)	1
5	01-404975-09280	Segment – Index Gear (Incls. Items 2 & 3)	1
6	01-404675-00336	Index – Worm Assy.	1
7	01-402175-05163	Set Screw 5/16-18 Cup Pt.	1
8	01-403875-00151	Knob – Index	1
9	01-402175-00121	Nut 1/2-20 Hex	1
10	01-402275-00414	Plug – Hole	1
11	01-403875-00137	Cover – Switch	1
12	01-402175-00375	Self-Tapping Screw #8 Pan Hd.	1
13	01-402175-01065	Cap Screw 5/16-18 x 1 1/4 Hex Hd.	1
14	01-402175-03063	Cap Screw 5/16-18 x 7/8 Hex Hd.	1
15	01-402175-01862	Cap Screw 5/16-18 x 1/2 Hex Socket Hd.	1
16	01-403375-00131	Spacer	1
17	01-402275-03065	Lockwasher 5/16 Spring	1
18	01-402175-05060	Nut 5/16-18 Hex	1
19	01-403375-00306	Block – Adjusting Roller	1
20	01-403375-00304	Bracket – Roller	1
21	01-402175-05060	Nut 5/16-18 Hex	1
22	01-402275-01061	Washer 5/16 Plain	1
23	01-404375-00031	Bearing – Roller	1
24	01-402275-00091	Washer	1
25	01-403375-00249	Screw – Roller Bearing	1
26	01-403375-00305	Rail – Square	1
27	01-402175-01065	Cap Screw 5/16-18 x 1 1/4 Hex Hd.	1
28	01-403475-00702	Cover – Cord	1
29	01-402175-00105	Self-Tapping Screw 8 x 3/8 Pan Hd.	2
30	01-402175-01665	Mach. Screw 5/16-18 x 1 1/4 Hex Flat Hd. (909A & 919A)	1
31	01-402175-01314	Screw 4-40 x 1/2 Pan Hd. (909A & 919A)	1
32	01-402375-00177	Cable – Carrier	1
33	01-402175-00381	Set Screw 5/16 Flat Pt.	1
34	01-402175-05061	Jam Nut 5/16-18 Hex	1
35	01-402175-00107	Lock Nut #10 Hex	1
36	01-402175-00106	Set Screw #10 Flat Pt.	1
37	01-402675-00687	Clip – Cable (909A & 919A)	1
38	01-402175-00105	Self-Tapping Screw #8 x 3/8 Pan Hd. (909A & 919A)	1
39	01-402175-01310	Mach. Screw 4-40 x 1/4 Pan Hd. (909A & 919A)	1
40	01-402675-00685	Bushing – Cord (909A & 919A)	1
41	01-403375-00336	Plug	1
42	01-402475-00003	Cover – Oil Hole	1
43	01-404675-01089	Carriage Assy.	1
44	01-403475-00169	Carriage Cover	1
45	01-403275-00035	Wick – Oil	1
46	01-402275-00053	Bushing	1
47	01-404575-01018	Post Assy. (Manual)	1
48	01-404975-00457	Legs – Kit (4 In.) (Set Of 4)	1
49	01-404575-01016	Post Assy. – Lift	1
50	01-403875-00228	Foot Assy. – Post	1
51	01-404575-01020	Spacer – Foot Assy. (919A, 919E, & 919M)	1
52	01-403275-00045	Washer – Rubber	1
53	01-403275-00046	Bumper – Rubber	1
54	01-402275-03050	Washer	1
55	01-402175-03858	Cap Screw 1/4-20 x 1 1/4 Hex Socket Hd.	1
56	01-403375-00091	Rail – Slide	1
57	01-402275-00092	Ring – Snap	1
58	01-403275-00047	Washer – Round Rail	1
59	01-402175-03442	Mach. Screw 10-24 x 1/2 Truss Hd.	1
60	01-403175-00152	Logo – Berkel	1

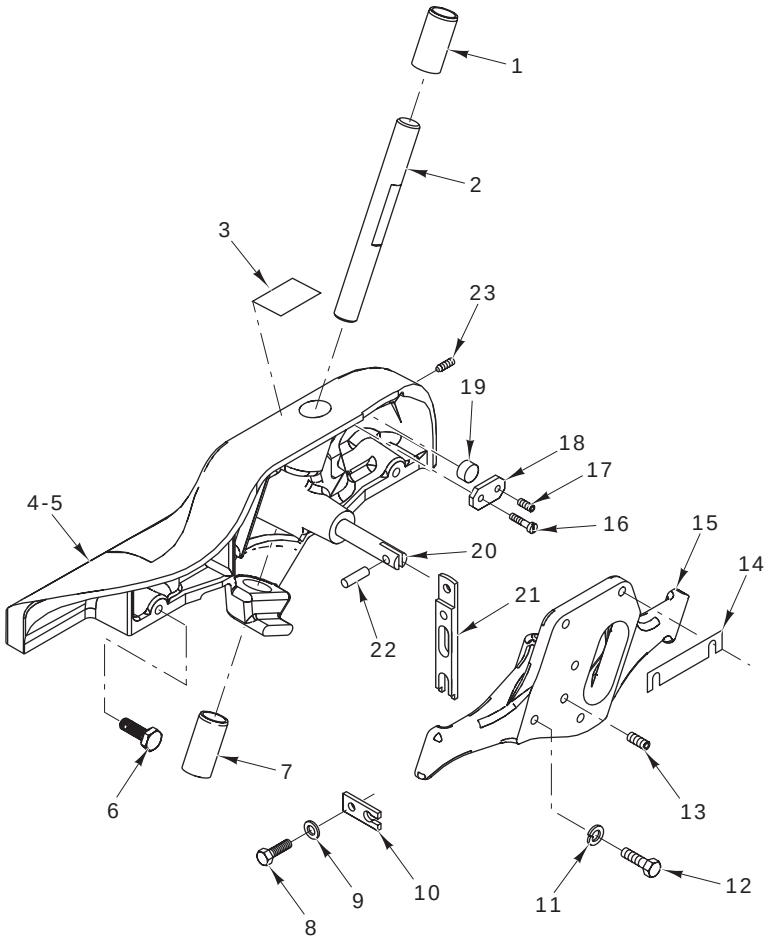

GAUGE PLATE

GAUGE PLATE

ILLUS. PL-58944	PART NO.	NAME OF PART	AMT.
1	01-402275-00058	Bushing	1
2	01-403375-00296	Rod	1
3	01-403475-00162	Plate – Slide Rod	1
4	01-404675-01082	Support Assy. – Gauge Plate (Incls. Items 1, 3, 7, 20, 21, & 22) (909A & 919A)	1
5	01-404675-00875	Support Assy. – Gauge Plate (909E, 909M, 919E, & 919M)	1
6	01-402175-00097	Screw 1/4-20 x 3/4 Hex Hd. (SST)	1
7	01-402275-00058	Bushing	1
8	01-402175-01060	Cap Screw 5/16-18 x 1/2 Hex Hd.	1
9	01-402275-01061	Washer 5/16 Plain	1
10	01-403375-00298	Clamp – Index Link	1
11	01-402275-03050	Washer	1
12	01-402175-01054	Screw 1/4-20 x 7/8 Hex	1
13	01-402175-05155	Set Screw 1/4-20 Cup Pt.	1
14	01-403275-00044	Shim	1
15	01-403775-00146	Base – Gauge Plate	1
16	01-402175-03381	Screw 6-32 x 5/16 Slotted Pan Hd. (SST) (909A & 919A)	1
17	SC-055-02	Set Screw 1/4-20 x 1/4 Hdls., Cup Pt. (SST) (909A & 919A)	1
18	01-403475-01015	Plate – Magnet Lock	1
19	01-402675-00892	Magnet – Interlock	1
20	01-403375-00361	Pin	1
21	01-404575-00101	Index Link – Plate Assy.	1
22	01-402275-01131	Pin – Groove	1
23	01-402175-07142	Set Screw 10-24 x 5/16 Hex Cup Pt. (909A & 919A)	1

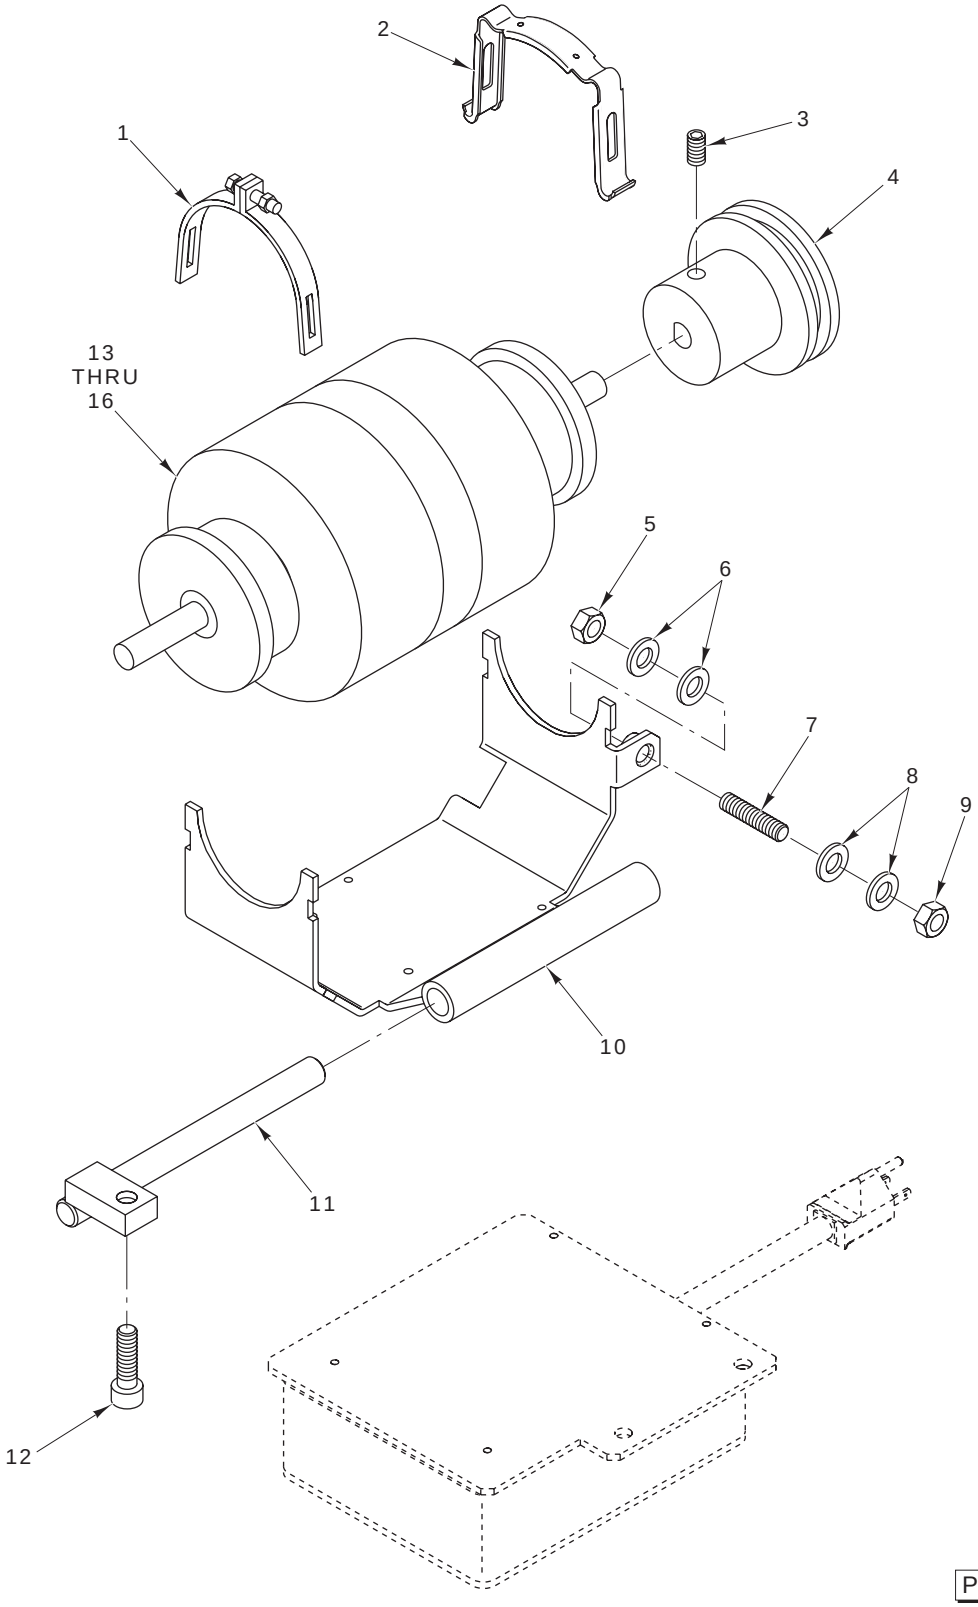

KNIFE DRIVE MOTOR UNIT

KNIFE DRIVE MOTOR UNIT

ILLUS. PL-58946	PART NO.	NAME OF PART	AMT.
1	01-402275-00087	Clamp – Motor	1
2	01-403275-00039	Clip – Speed	1
3	01-402175-05152	Set Screw 1/4-20 Cup Pt.	1
4	01-403375-01099	Pulley – Knife Drive	1
5	01-402175-05060	Nut 5/16-18 Hex	1
6	01-402275-01061	Washer	2
7	01-402175-00378	Set Screw 5/16 Cup Pt	1
8	01-402275-01061	Washer	2
9	01-402175-05060	Nut 5/16-18 Hex	1
10	01-404575-00805	Motor Mount Assy.	1
11	01-404575-00097	Pivot Assy. – Motor	1
12	01-402175-01760	Cap Screw 5/16-18 x 1/2 Hex Socket Hd.	1
13	01-404175-00511	Motor (115 V., 60 Hz.) (2 Speed) (909A & 919A)	1
14	01-404175-00588	Motor (115 V., 60 Hz.) (1 Speed) (909E, 909M, 919E, & 919M)	1
15	01-402675-00924	Relay (Sinpac)	1
16	01-402675-00925	Timer – A Motor	1

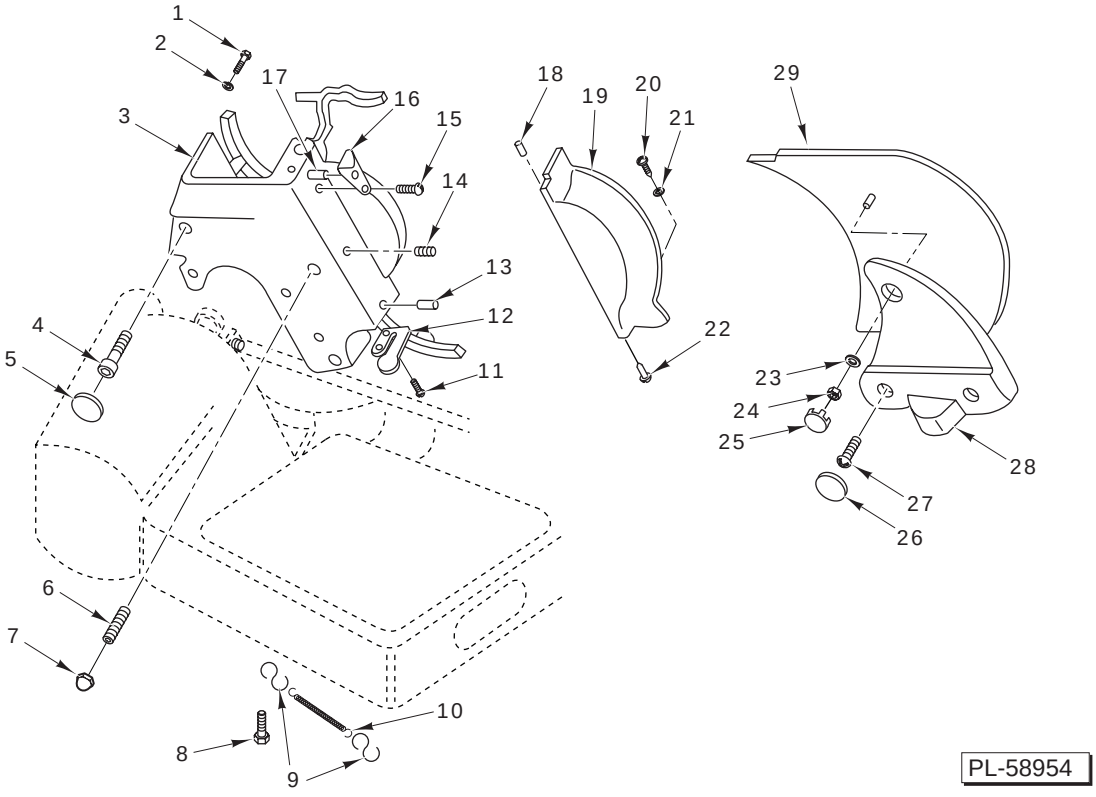
1
2
17
16
15
3
14
13
12
4
5
11
6
7
10
8
9
18
19
20
21
22
29
23
24
25
28
27
26
PL-58954

KNIFE BOX

KNIFE BOX

ILLUS. PL-58954	PART NO.	NAME OF PART	AMT.
1	01-402175-03063	Cap Screw 5/16-18 x 7/8 Hex Hd. (Knife Box Mount)	1
2	01-402275-03065	Lockwasher 5/16 Spring	1
3	01-404575-01012	Box – Knife With Bushings	1
4	01-402175-03756	Cap Screw 1/4-20 x 1 1/4 Hex Socket Hd.	1
5	01-403475-00773	Plug – Hole	1
6	01-402175-05154	Set Screw 1/4-20 Cup Pt.	1
7	01-402175-07052	Crown Nut 1/4-20 Low	1
8	01-402175-01060	Cap Screw 5/16-18 x 1/2 Hex Hd.	1
9	01-403275-00060	Hook – Carriage	2
10	01-403275-00061	Spring – Extension	1
11	01-402175-03441	Mach. Screw 10-24 x 3/8 Truss Hd.	1
12	01-403475-00363	Hinge – Lower Deflector	1
13	01-403375-00291	Pin – Deflector Stop	1
14	01-402175-07152	Set Screw 1/4-20 x 5/16 Phil. Hd. (SST)	1
15	01-402175-03641	Mach. Screw 10-24 x 3/8 Flat Hd.	1
16	01-403475-00156	Hinge – Upper	1
17	01-402275-01122	Pin – Grooved 1/8 x 3/8	1
18	01-402275-00065	Pin – Grooved 1/8 x 3/4	1
19	01-403875-00138	Deflector – Slice (Incls. Items 18 thru 22)	1
20	01-402275-00066	Self-Tapping Screw 6 x 1/4 Phil. Pan Hd.	1
21	01-402275-03020	Washer	1
22	01-403375-00311	Pin	1
23	01-402275-03050	Washer	1
24	01-402175-05051	Jam Nut 1/4-20 x 5/32 Hex	1
25	01-403675-00071	Cover – Large Hole	1
26	01-403675-00072	Cover	1
27	01-402175-01764	Cap Screw 5/16-18 x 1 Hex Socket Hd.	1
28	01-403775-00147	Cover – Gauge Plate Support	1
29	01-404575-00808	Plate Assy. – Gauge	1

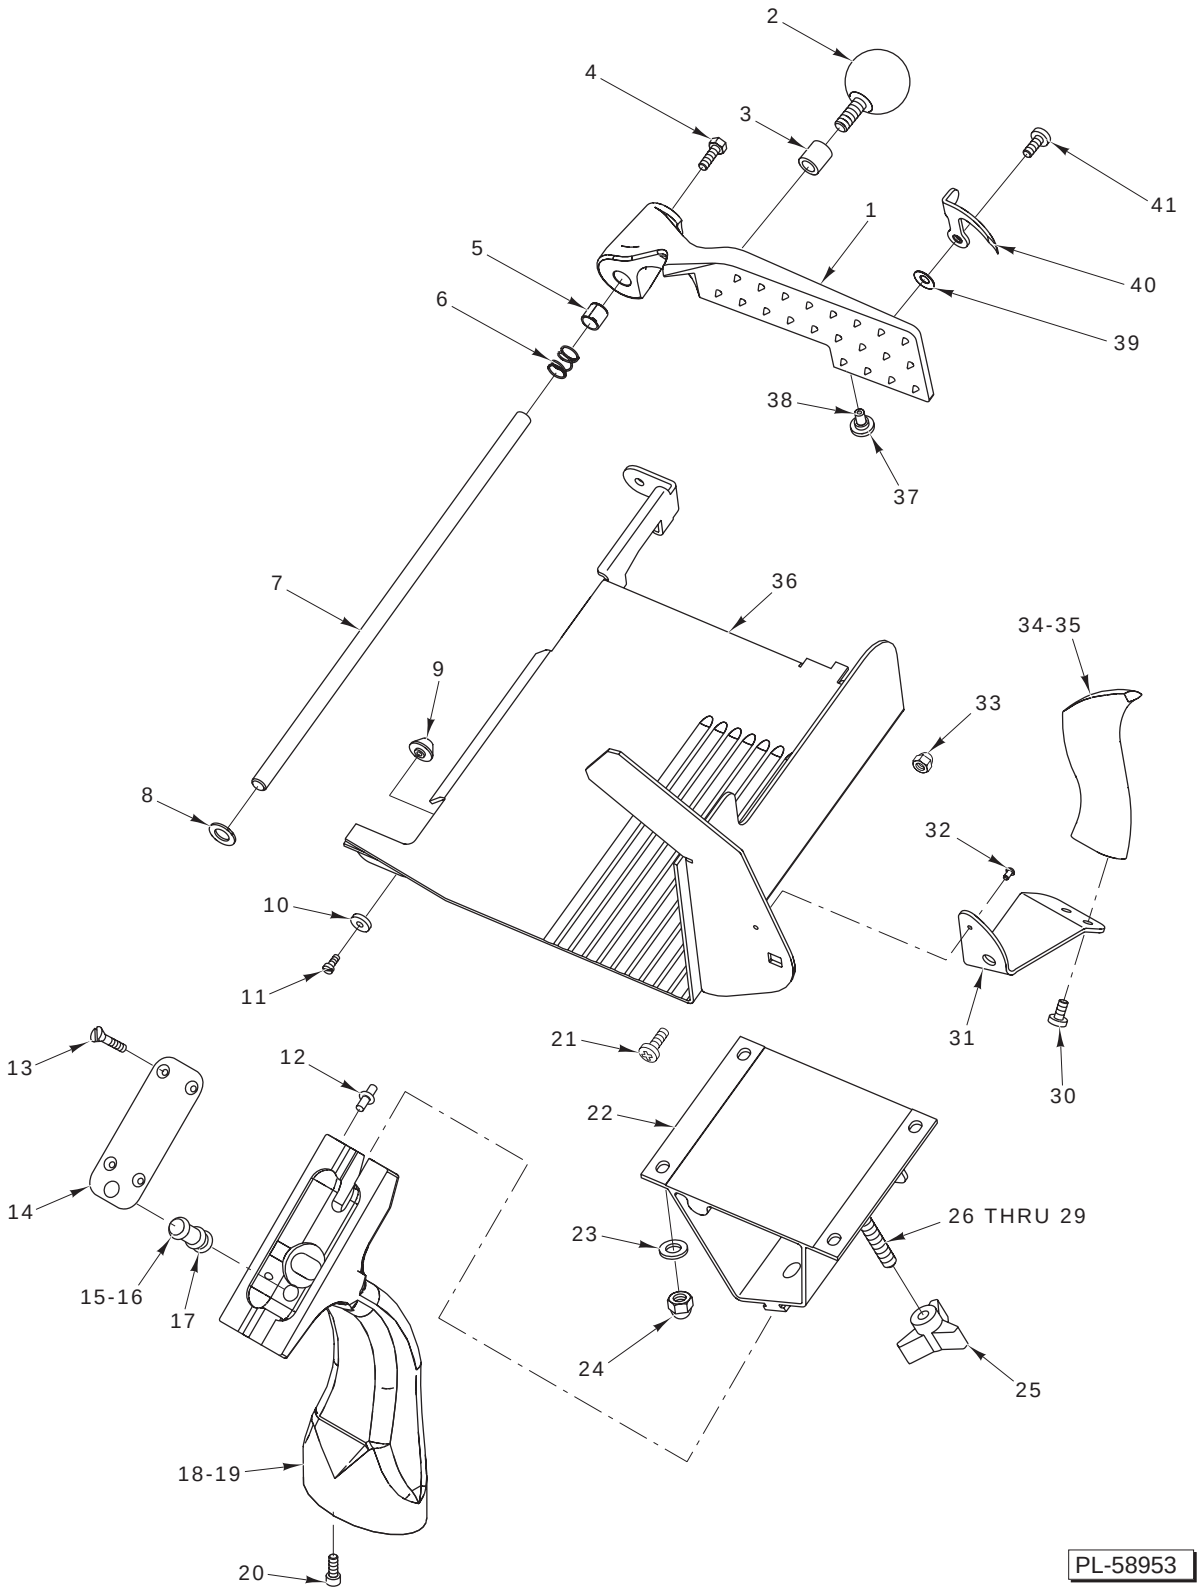

PRODUCT TABLE

PRODUCT TABLE

ILLUS. PL-58953	PART NO.	NAME OF PART	AMT.
1	01-404675-01014	Pusher Assy. – Meat	1
2	01-402275-00043	Knob	1
3	01-403375-00244	Spacer	1
4	01-402175-03052	Cap Screw 1/4-20 x 5/8 Hex Hd	1
5	01-402275-00045	Bearing 1/16	1
6	01-403275-00029	Spring – Compression	1
7	01-403375-01064	Shaft – Meat Pusher	1
8	01-402275-00438	Washer	1
9	01-403375-01149	Guide – Pusher Position	1
10	01-403275-00111	Washer	1
11	01-402175-03441	Mach. Screw 10-24 Truss Hd.	1
12	01-403375-01147	Pin – Table Adjustment	1
13	01-402175-03620	Mach. Screw 6-32 Flat Hd. (SST)	4
14	01-403475-01007	Plate – Cover Support Arm	1
15	01-403375-01344	Pin – Lock (909A & 919A)	1
16	01-403375-01371	Plug – Table Support Arm (909E, 909M, 919E, & 919M)	1
17	01-402275-00574	Spring – Lock Pin	1
18	01-404675-01080	Support Assy. – Table (909A & 919A)	1
19	01-404675-01103	Support Assy. – Table (909E, 909M, 919E, & 919M)	1
20	01-402175-01765	Cap Screw 5/16-18 x 1 1/4 Hex Socket Hd	1
21	01-402175-00392	Cap Screw 3/8-16 x 1/2 Hex Hd (SST)	1
22	01-404675-01020	Bracket Assy – Meat Table	1
23	01-402275-03050	Washer	4
24	01-402175-07052	Crown Nut 1/4-20 Low	4
25	01-402275-00063	Knob – Meat Table	1
26	01-402175-00440	Set Screw 3/8-16 x 2 Hex Hd.	1
27	01-402175-05071	Jam Nut 3/8-16 Hex	1
28	01-402675-00688	Magnet – Cylindrical	1
29	01-402175-07151	Set Screw 1/4-20 x 1/4 Cup Pt. (SST)	1
30	01-402175-03452	Mach Screw 1/4-20 x 5/8 Truss Hd.	2
31	01-403475-00811	Bracket – Ergonomic Handle	1
32	01-402275-00066	Self-Tapping Screw 6 x 1/4 Hex Hd	1
33	01-402175-07072	Crown Nut 3/8-16 Low	1
34	01-403875-00148	Handle – Table	1
35	01-404975-00360	Kit – Ergonomic Handle (Incls. Items 30 thru 34)	1
36	01-404575-00947	Meat Table Assy.	1
37	01-403875-00167	Pad – Nylon Lock/Wear	1
38	01-402175-00196	Set Screw 1/4-28 x 1/2 Cup Pt.	1
39	01-403275-00043	Washer – Spring	1
40	01-403475-00164	Hook – Meat Pusher (LH)	1
41	01-403375-00333	Screw Hex Hd.	1
	01-404675-01021	Table Assy. – Product (Incls. Items 1, 4, 6 thru 11, 21 thru 29, & 31 thru 36)	1

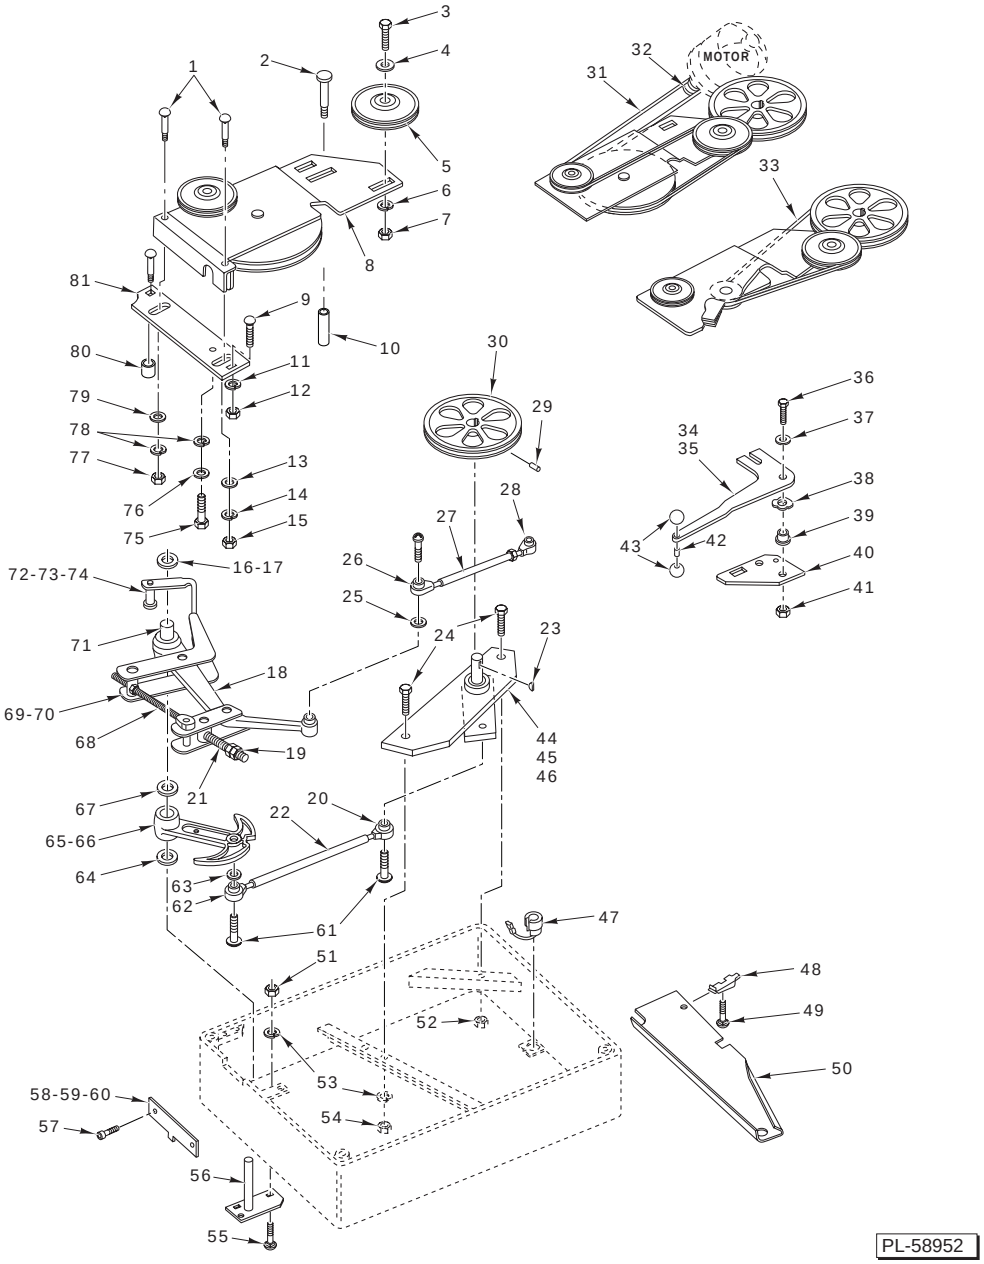

POWER STROKE

ILLUS. PL-58952	PART NO.	NAME OF PART	AMT.
1	01-402175-01267	Screw 5/16-18 x 2 Hex Hd.	2
2	01-402175-01270	Screw 5/16-18 x 3 1/2 Hex Hd.	1
3	01-402175-01065	Cap Screw 5/16-18 x 1 1/4 Hex Hd.	1
4	01-402275-01061	Washer	1
5	01-404375-00137	Sheave Assy.	1
6	01-402275-03065	Lockwasher 5/16 Spring	1
7	01-402175-05060	Nut 5/16-18 Hex	1
8	01-404675-00811	Sheave & Bracket Assy. (Incls. Items 3 thru 7)	1
9	01-402175-03062	Cap Screw 5/16-18 x 3/4	2
10	01-403375-01088	Spacer – Sheave Bracket	1
11	01-402275-03065	Lockwasher 5/16 Spring	1
12	01-402175-05060	Nut 5/16-18 Hex	1
13	01-402275-01060	Washer	1
14	01-402275-03065	Lockwasher 5/16 Spring	1
15	01-402175-05060	Nut 5/16-18 Hex	1
16	01-403275-00128	Shim – Washer (Thin)	1

POWER STROKE (CONT.)

ILLUS. PL-58952	PART NO.	NAME OF PART	AMT.
17	01-403275-00018	Washer (Thick)	1
18	01-404375-00188	Arm Assy. – Drive	1
19	01-402175-05040	Nut 10-24 Hex	1
20	01-402375-00144	Bearing – Rod End	1
21	01-403275-00084	Spring – Compression	1
22	01-404375-00197	Link Assy. – Shift (Long)	1
23	01-403275-00006	Key – Woodruff	1
24	01-402175-01065	Cap Screw 5/16-18 x 1 1/4 Hex Hd.	2
25	01-402275-00028	Washer	1
26	01-402375-00143	Bearing – Rod End	1
27	01-404675-00840	Link Assy. – Carriage (Short)	1
28	01-402375-00144	Bearing – Rod End	1
29	01-402175-05152	Set Screw 1/4-20 Cup Pt.	1
30	01-403775-00373	Sheave – Gear Box	1
31	01-402375-00133	Belt	1
32	01-403375-01083	Sheave	1
33	01-402375-00138	Belt – Poly V 4 x 40	1
34	01-404675-00925	Lever & Bracket Assy. (Incls Items 35 thru 43)	1
35	01-404575-00865	Lever Assy. – Shift	1
36	01-402175-00210	Cap Screw 1/4-28 x 7/8 Hex Hd.	1
37	01-402275-00408	Shim – Washer	1
38	01-403275-00025	Washer – 7/16 Spring	1
39	01-403375-01151	Spacer – Shift Lever	1
40	01-403575-00063	Bracket	1
41	01-402175-00265	Nut 1/4-28 Hex	1
42	01-402275-00051	Pin –Spring	1
43	01-403875-00026	Knob – Half	2
44	01-402375-00010	Bearing – Ball	1
45	01-404375-00191	Crank Assy. (Incls Items 44 & 46)	1
46	01-403275-00010	Washer – Flat	1
47	01-402675-00562	Bushing	1
48	01-402275-00123	Nut #10 U Type	1
49	01-402175-03442	Mach Screw 10-24 x 1/2 Truss Hd.	1
50	01-403475-00783	Shield – Base	1
51	01-402175-05060	Nut 5/16-18 Hex	1
52	01-402175-05060	Nut 5/16-18 Hex	1
53	01-403275-00018	Washer	2
54	01-402175-05060	Nut 5/16-18 Hex	1
55	01-402175-01264	Screw 5/16-18 x 1 1/4 Hex Hd.	1
56	01-404575-00075	Drive Assy. – Arm Pad	1
57	01-402175-00424	Screw #2 x 3/8 Hex Hd.	2
58	01-404575-00866	Plate Assy. – Shift	1
59	01-403175-00571	Plate – Stroke	1
60	01-403475-00835	Plate – Shift	1
61	01-402175-01863	Cap Screw 5/16-18 x 7/8 Hex Hd.	2
62	01-402375-00143	Bearing – Rod End	1
63	01-402275-00028	Washer	1
64	01-403275-00018	Washer	1
65	01-404375-00193	Arm Assy. – Engagement	1
66	01-402275-00022	Bushing	1
67	01-403275-00032	Washer	1
68	01-403375-00227	Rod – Control	1
69	01-402175-05040	Nut 10-24 Hex	1
70	01-409664-00060	Washer	1
71	01-402275-00021	Bushing	1
72	01-402275-00024	Roller	1
73	01-402275-00029	Rivet	1
74	01-403275-00023	Bushing	1
75	01-402175-01065	Cap Screw 5/16-18 x 1 1/4 Hex Hd.	1
76	01-402275-01061	Washer	1
77	01-402175-05060	Nut 5/16-18 Hex	1
78	01-402275-03065	Lockwasher 5/16 Spring	2
79	01-402275-01060	Washer	1
80	01-403375-00223	Spacer – Sheave Support Bracket	1
81	01-403475-00324	Support – Sheave Bracket	1

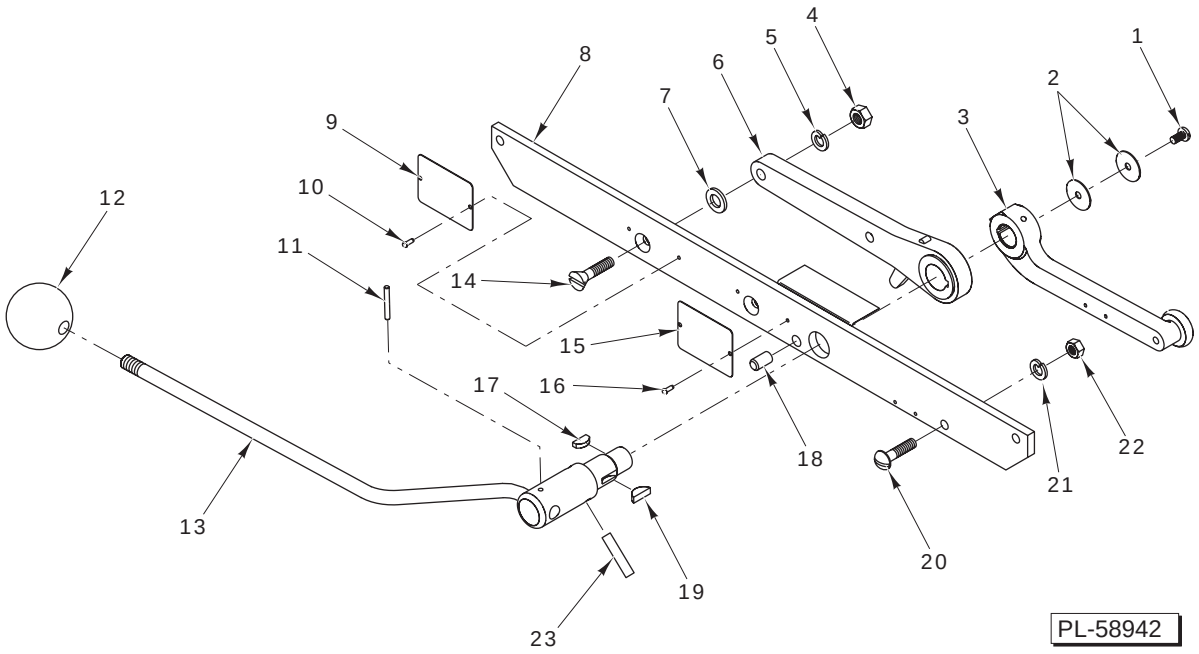

LIFT ASSEMBLY (909 SERIES)

LIFT ASSEMBLY (909 SERIES)

ILLUS. PL-58942	PART NO.	NAME OF PART	AMT.
1	01-402175-03341	Mach. Screw 10-24 x 3/8 Pan Hd.	1
2	01-409405-00030	Shim	2
3	01-404375-00199	Arm Assy. – Lift	1
4	01-402175-07050	Nut 1/4-20 Hex	1
5	01-402275-03055	Lockwasher 1/4 Spring	1
6	01-402375-00145	Rachet	1
7	01-402275-00437	Spacer – Rachet	1
8	01-404575-00824	Bracket Assy. – Rachet	1
9	01-403175-00618	Plate – Lift Instruct	1
10	01-402175-00257	Self-Tapping Screw #2 x 1/4 Rd. Hd., Type U	2
11	01-402175-05143	Set Screw 10-24 Cup Pt.	1
12	01-402275-00042	Knob – 3/8 Female	1
13	01-404575-00825	Handle Assy.	1
14	01-402175-03657	Mach. Screw 1/4-20 x 1 1/2 Hex Flat Hd.	1
15	01-403175-00613	Plate – Lever	1
16	01-402175-00257	Self-Tapping Screw #2 x 1/4 Rd. Hd., Type U	2
17	01-403275-00006	Key – Special Woodruff	1
18	01-403375-01197	Handle – Stop Pin	1
19	01-410308	Key – Woodruff	1
20	01-402175-03457	Mach. Screw 1/4-20 x 1 1/2 Truss Hd.	1
21	01-402275-03055	Lockwasher 1/4 Spring	1
22	01-402175-07050	Nut 1/4-20 Hex	1
23	01-402275-03578	Pin – Roll	1

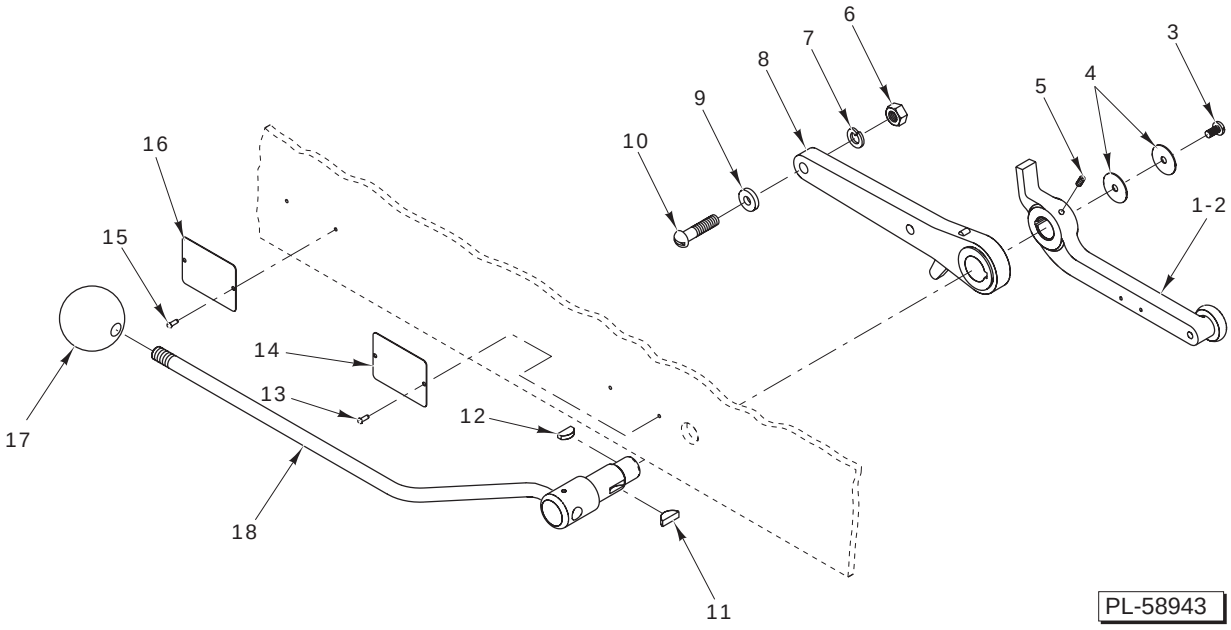

LIFT ASSEMBLY (919 SERIES)

LIFT ASSEMBLY (919 SERIES)

ILLUS. PL-58943	PART NO.	NAME OF PART	AMT.
1	01-404375-00198	Arm Assy. – Lift	1
2	01-403475-00787	Cover – Rachet	1
3	01-402175-03341	Mach. Screw 10-24 x 3/8 Pan Hd.	1
4	01-409405-00030	Shim	2
5	01-402175-05143	Set Screw 10-24 Cup Pt.	1
6	01-402175-07050	Nut 1/4-20 Hex	1
7	01-402275-03055	Lockwasher 1/4 Spring	1
8	01-402375-00145	Rachet	1
9	01-402275-00439	Spacer – Rachet	1
10	01-402175-03457	Mach. Screw 1/4-20 x 1 1/2 Truss Hd.	1
11	01-410308	Key – Woodruff	1
12	01-403275-00006	Key – Special Woodruff	1
13	01-402175-00257	Self-Tapping Screw #2 x 1/4 Rd. Hd., Type U	2
14	01-403175-00613	Plate – Lever	1
15	01-402175-00257	Self-Tapping Screw #2 x 1/4 Rd. Hd., Type U	2
16	01-403175-00618	Plate – Lift Instruct	1
17	01-402275-00042	Knob – 3/8 Female	1
18	01-404575-00826	Handle Assy.	1

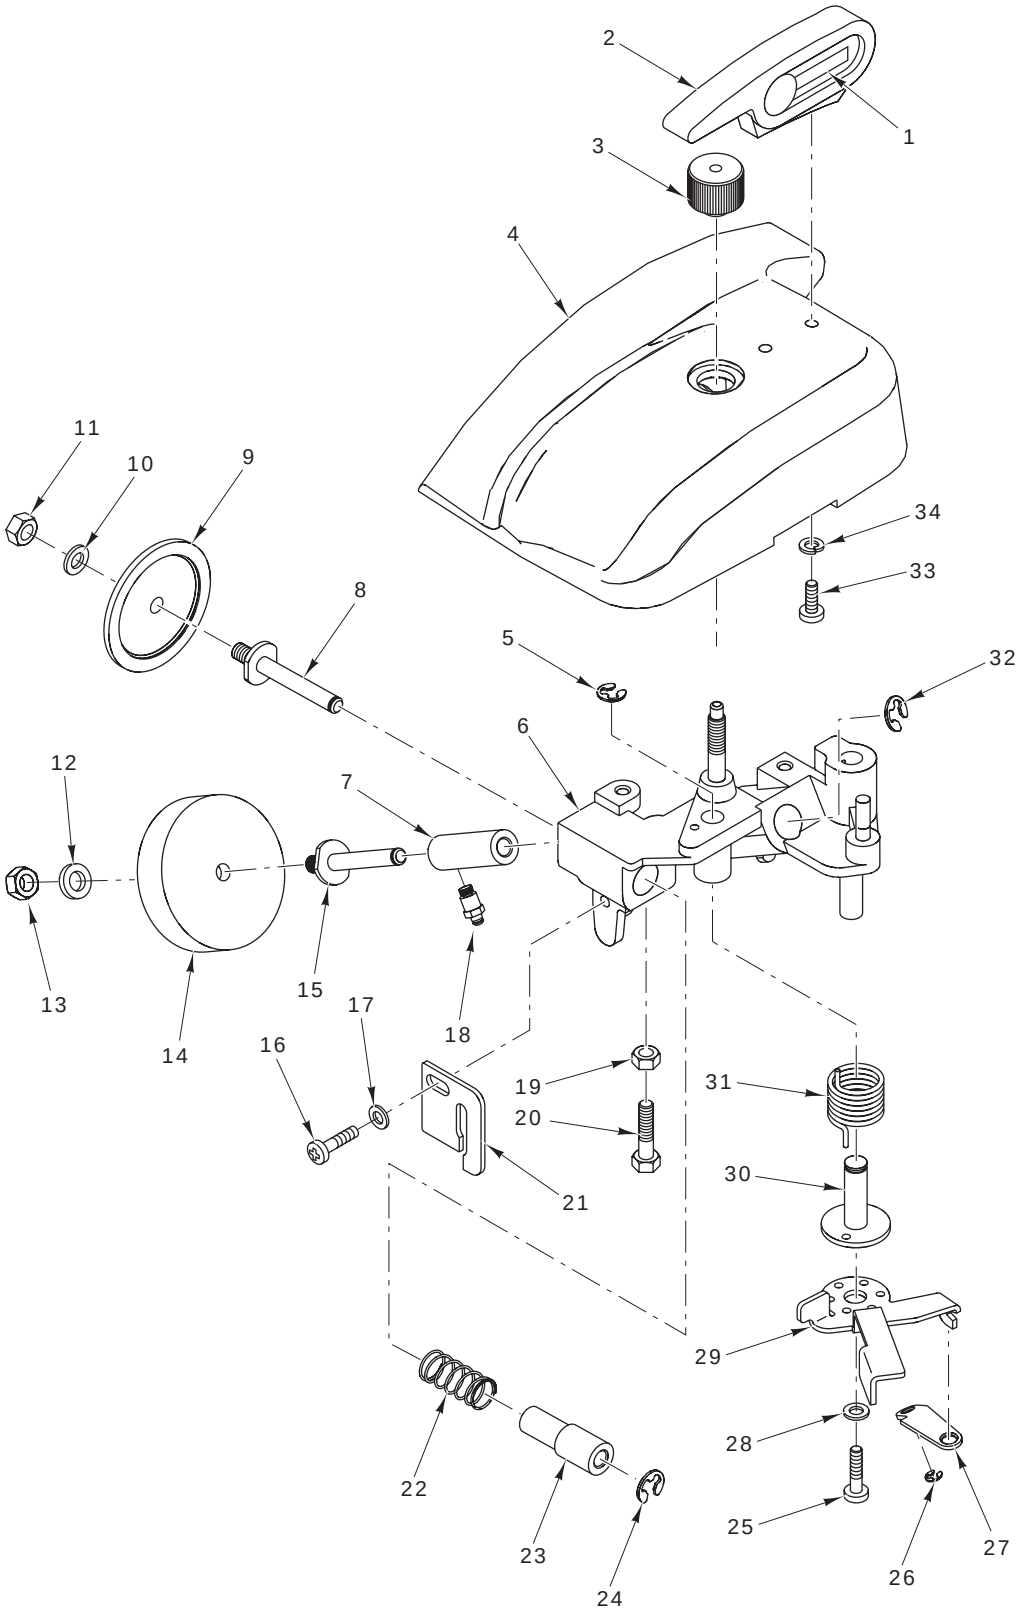

SHARPENER ASSEMBLY

SHARPENER ASSEMBLY

ILLUS. PL-58949	PART NO.	NAME OF PART	AMT.
1	01-403175-00638	Logo – Sharpener	1
2	01-404575-00832	Handle Assy. – Sharpener	1
3	01-403375-01355	Nut – Sharpener Frame Cover	1
4	01-403875-00225	Cover – Sharpener	1
5	01-402275-00445	Ring – Retaining	1
6	01-403875-00226	Frame – Sharpener	1
7	01-403375-01349	Bearing – Sharpening Stone	1
8	01-403375-01118	Spindle – Inside	1
9	01-403675-00075	Stone – Inside Deburr	1
10	01-402275-03050	Washer	1
11	01-402175-00387	Nut M6 x 1 Hex	1
12	01-402275-03050	Washer	1
13	01-402175-00388	Nut M6 x 1 Hex (LH)	1
14	01-403675-00076	Stone – Outside	1
15	01-403375-01119	Spindle – Outside	1
16	01-402175-00384	Screw M5 x 8 Slotted Pan Hd.	1
17	01-402275-03040	Washer	1
18	01-403375-01351	Screw – Link	1
19	01-402175-00386	Nut M5 x 8 Hex	1
20	01-402175-00385	Cap Screw M5 x 8 Hex Hd.	1
21	01-403475-00789	Plate – Sharpener Position	1
22	01-403275-00228	Spring – Deburring Stone	1
23	01-403375-01350	Bearing – Deburring Stone	1
24	01-402275-00444	Ring – Retaining	1
25	01-402175-00382	Screw M4 x 7 Pan Hd.	1
26	01-402275-00443	Ring – Retaining	1
27	01-403475-00791	Link – Sharpening Stone	1
28	01-402275-00441	Washer	1
29	01-403475-01009	Handle – Sharpener	1
30	01-403375-01120	Spindle – Bellcrank	1
31	01-403275-00212	Spring – Torsion	1
32	01-402275-00444	Ring – Retaining	1
33	01-402175-00397	Screw M4 x 16 Pan Hd.	1
34	01-402275-01037	Lockwasher	1
	01-404675-01084	Cover Assy. – Sharpener (Incls. Items 1 thru 5)	1
	01-404975-00375	Sharpener Kit	1
	01-404675-01081	Sharpener Assy. (Without Cover) (Incls. Items 5, 6, 7, 16 thru 19, 21, & 22)	1
	01-404675-01085	Sharpener Assy. (With Cover) (Incls. Items 1 thru 9, 11, 13 thru 29, 31, & 32)	1